

# CAUTION!!!!

## BEFORE INSTALLING

## PLEASE READ

The DX 1600V unit comes with no power safety Fuses installed in the unit.

You must fuse this unit with the fuses supplied.

1. Install a 30 Amp ATC fuse into each Bussmann HHD fuse holder.
2. Use #4 or larger red and black wires to reach from your battery or power source to the rear of the DX1600V.
3. Solder or crimp the silver plated contacts to the wires and install them into the gray plastic connector body properly.
4. Connect the other end of the red wire to five of the fuse holders. Connect the other end of these fuse holders to the positive post.
5. Connect the black wire to the negative post.
6. For best protection, always place the five fuse holders at the battery positive post to protect against any short of the positive wire to ground.

Install as per diagram below:

