




DX 800V (Continued from front)

CAUTION! **PLEASE READ BEFORE INSTALLING**

- This DX 800V unit comes with no power safety fuses installed in the unit.
- You must fuse this unit with the fuses supplied.
- Install as per diagram below.

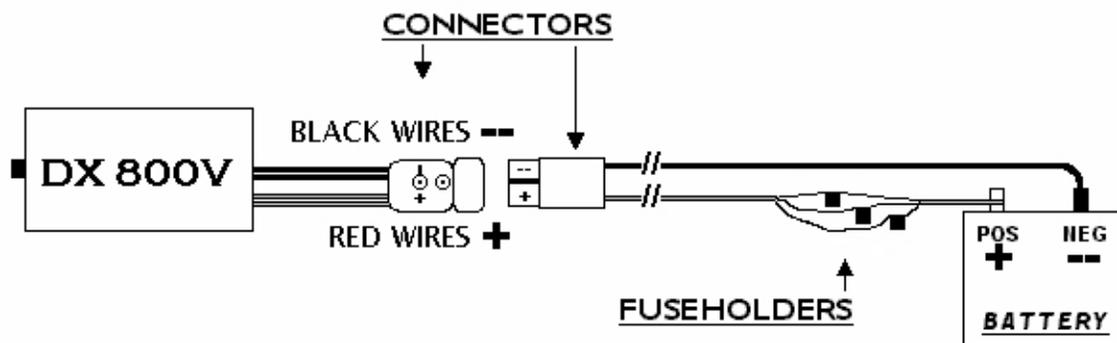

1. Install a 30 Amp ATC fuse into each Bussmann HHD fuseholder.
2. Use #4 or larger red and black wires to reach from your battery or power source to the rear of the DX 800V.
3. Solder or crimp the silver-plated contacts to the wires at the rear of the unit and install them into the gray plastic connector body properly.
4. Connect the other end of the red wire to three of the fuseholders. Connect the other end of these fuseholders to the positive post.
5. Connect the black wire to the negative post.
6. For best protection, always place the three fuseholders at the battery positive post to protect against any short of the positive wire to ground.