

## **JB 12B/RB NOTES**

- All resistances are in ohms. ± 10% unless otherwise noted.
- All voltages are measured from chassis ground and are  $\pm$  10%.
- Relay is in receive boost position.
- Stand-by switch is in receive boost position.

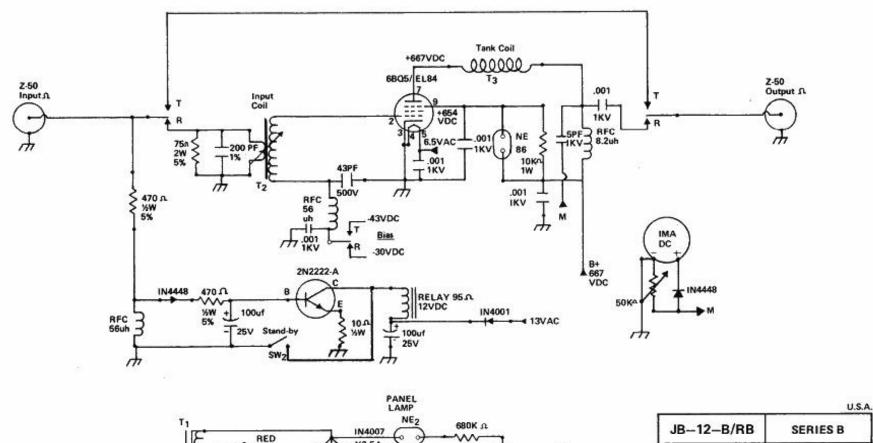

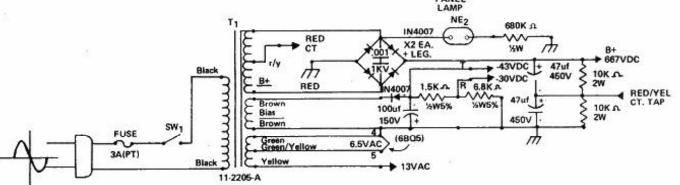

JB-12-B/R	B SEI	RIES B
RECEIVE B	OOST AMP	LIFIER
WAWASEE EL	ECTRONICS	CO. INC.
SYRACUSE	, INDIANA	46567
NOV. 1977	CK. R.M.	DR. B.A.