



# TRANSISTORIZED MICROPHONE WITH **EXTERNAL TONE AND VOLUME CONTROLS**

#### Description

The ASTATIC 575M-6 "power" microphone offers the CB'er modern "teardrop" styling and features along with the sound and "talk-power" made famous by the ASTATIC D104 for over 60 years.

An output impedance compatible with the inputs of almost all commercial transceivers and externally adjustable high gain amplifier ensures desired modulation level. The 575M-6 has easily accessible slide controls for volume and tone adjustment so that the correct modulation level and tone quality can be set for each operators voice. The 575M-6 preamplifier is powered by a readily available, easily replaced, 9 volt battery. The 575M-6 has a six wire coil cord which allows for relay, electronic or virtually any type hookup with almost any transceiver. The audio line is open during receive.

### Specifications

Battery Life: .....

Type: ...... Transistorized Ceramic Frequency Response: ...... Adjustable (See Frequency Response Curveon other side) Maximum Output Level: ... -38 dB below 1 volt per microbar at 1 kHz into I megohm load Output Adjustment: ...... 40 dB minimum range Impedance: ...... 5000 ohms max., recommended load of 100 ohms and up; performs well over entire impedance range up to open circuit Connector: ...... Available stripped and tinned or configured with 4 pin (DX1) or 5 pin (DX2) DIN. Cable: ...... Five conductor (one conductor shielded) coiled cord that extends to 2.3 m (7 1/2 ft.). Durable strain relief bushing protects against cable breakage at microphone housing. Housing: ...... Attractive, durable high impact molded black ABS

Battery: ..... Standard 9 Volt Battery (Not Included)

usage)

**ASTATIC Quality** 

All 575M-6 microphones are audio tested and inspected prior to shipment. Our absolute commitment to quality insures that ASTATIC microphones remain the Best Value in today's competitive industry.

(2 31/32") wide x 54.8 mm ( 2 5/32") deep Weight: ...... 227 grams (8 oz.)


Approximately 6 months (based on normal

#### SPECIFICATIONS FOR 575M-6

5K

10K

20K

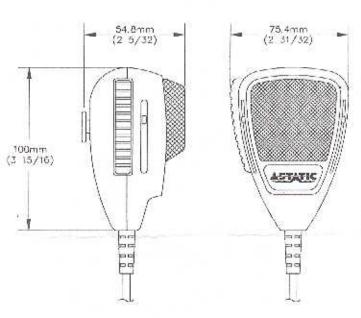

# Battery Replacement Remove the rear housing by removing the four screws. Carefully lift off

50

100

≥ 0

20

왕 -10 80 -20 왕 **-3**9

the rear housing. Unsnap the battery from the battery connector and install a new battery. Carefully replace the rear housing and fasten with the four screws previously removed. Depress the switch lever fully while tightening the screws.

500

FREQUENCY IN HERTZ

## Connector-Cable Clamping

If the microphone plug you have selected for your hookup requirements does not have a cable clamp suitable for our small diameter high quality microphone cable, use tubing as supplied by ASTATIC. Simply slip tubing over cable prior to soldering of lead wires. Position it to ensure proper clamping of cable and tubing by the connector.

#### Volume and Tone Adjustments

HALL BASS

prefer) with the external volume control set at 0 and the tone control set in the center position, adjust the volume control for the correct modulation level. Sliding the volume control toward 9 increases the volume. The external tone control should then be adjusted for the most intelligible sound. Slide the tone control toward 0 for an increase in bass response and towards 9 for a decrease in bass response.

At a speaking distance of approximately 2 inches (or the position you

