

This Information Is Provided By
CBTricks.com

Palomar Model 500 Owner's Manual

Liability of damages to any equipment is the sole responsibility of the user! Downloading, viewing, or using any information provided on these pages automatically accepts the user to the terms of this agreement!

Modifications are provided for information purposes only!

Supporters of CBTricks.com paid for the hosting so you would have this file.

CBTricks.com is a non-commercial personal website was created to help promote the exchange of service, modification, technically oriented information, and historical information aimed at the Citizens Band, GMRS (CB "A" Band), MURS, Amateur Radios and RF Amps.

CBTricks.com is not sponsored by or connected to any Retailer, Radio, Antenna Manufacturer or Amp Manufacturer, or affiliated with any site links shown in the links database. The use of product or company names on my web site is not endorsement of that product or company.

The site is supported with donations from users, friends and selling of the Site Supporters DVD's to cover some of the costs of having this website on the Internet instead of relying on banner ads, pop-up ads, commercial links, etc. Thus I do not accept advertising banners or pop-up/pop-under advertising or other marketing/sales links or gimmicks on my website.

ALL the money from donations is used for CBTricks.com I didn't do all the work to make money (I have a day job). This work was not done for someone else to make money also, for example the ebay CD sellers.


All Trademarks, Logos, and Brand Names are the property of their respective owners.

This information is not provided by, or affiliated in any way with any radio or antenna Manufacturers.

Thank you for any support you can give.

For information on how to Support CBTricks.com

<http://www.cbtricks.com/support/>

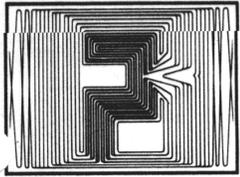

PALOMAR ELECTRONICS CORPORATION

MODEL 500 WATT-SWR METER AND AM MONITOR 0-10, 0-100, 0-1000 Watts

TO MEASURE WATTS

FWD-REV switch in REV position. SWR-PWR switch in PWR position. Range switch in proper position. Transmitter connected to "INPUT" connector on back of model 500 antenna or dummy load connected to "ANTENNA" connector on back of model 500. Read watts on proper black scale.

TO MEASURE SWR

FWD-REV switch in FWD position. SWR-PWR switch in SWR position. Transmitter and antenna connected as in "To measure watts." Transmit and set meter pointer to SWR set on red scale using SWR set knob. Switch FWD-REV switch to REV position and read SWR on red scale.

AM MONITOR


Headphone plugged into jack at front of model 500. FWD-REV switch in FWD position. SWR-PWR switch in SWR position. When transmitting and speaking into mike. The transmitted audio will be heard in the earphones. Do not measure watts or SWR with headphones plugged into the model 500.

The calibration controls on the back of the model 500 are set at the factory and should not require further adjustment.

WARRANTY POLICY

PALOMAR ELECTRONICS CORP. WARRANTS THIS EQUIPMENT AGAINST DEFECTS IN MATERIAL AND WORKMANSHIP, EXCEPT FOR TUBES, TRANSISTORS, AND DIODES UNDER NORMAL SERVICE FOR A PERIOD OF SIX MONTHS FROM DATE OF ORIGINAL PURCHASE. DO NOT SHIP TO THE FACTORY WITHOUT PRIOR AUTHORIZATION. ALL RETURNS FOR REPAIR MUST BE SENT FREIGHT PREPAID. PALOMAR ELECTRONICS CORP. WILL PREPAY THE RETURN FREIGHT. THIS WARRANTY IS LIMITED TO REPAIRING OR REPLACING ONLY THE DEFECTIVE PARTS, AND IS NOT VALID IF THE EQUIPMENT HAS BEEN TAMPERED WITH, MISUSED, OR DAMAGED.



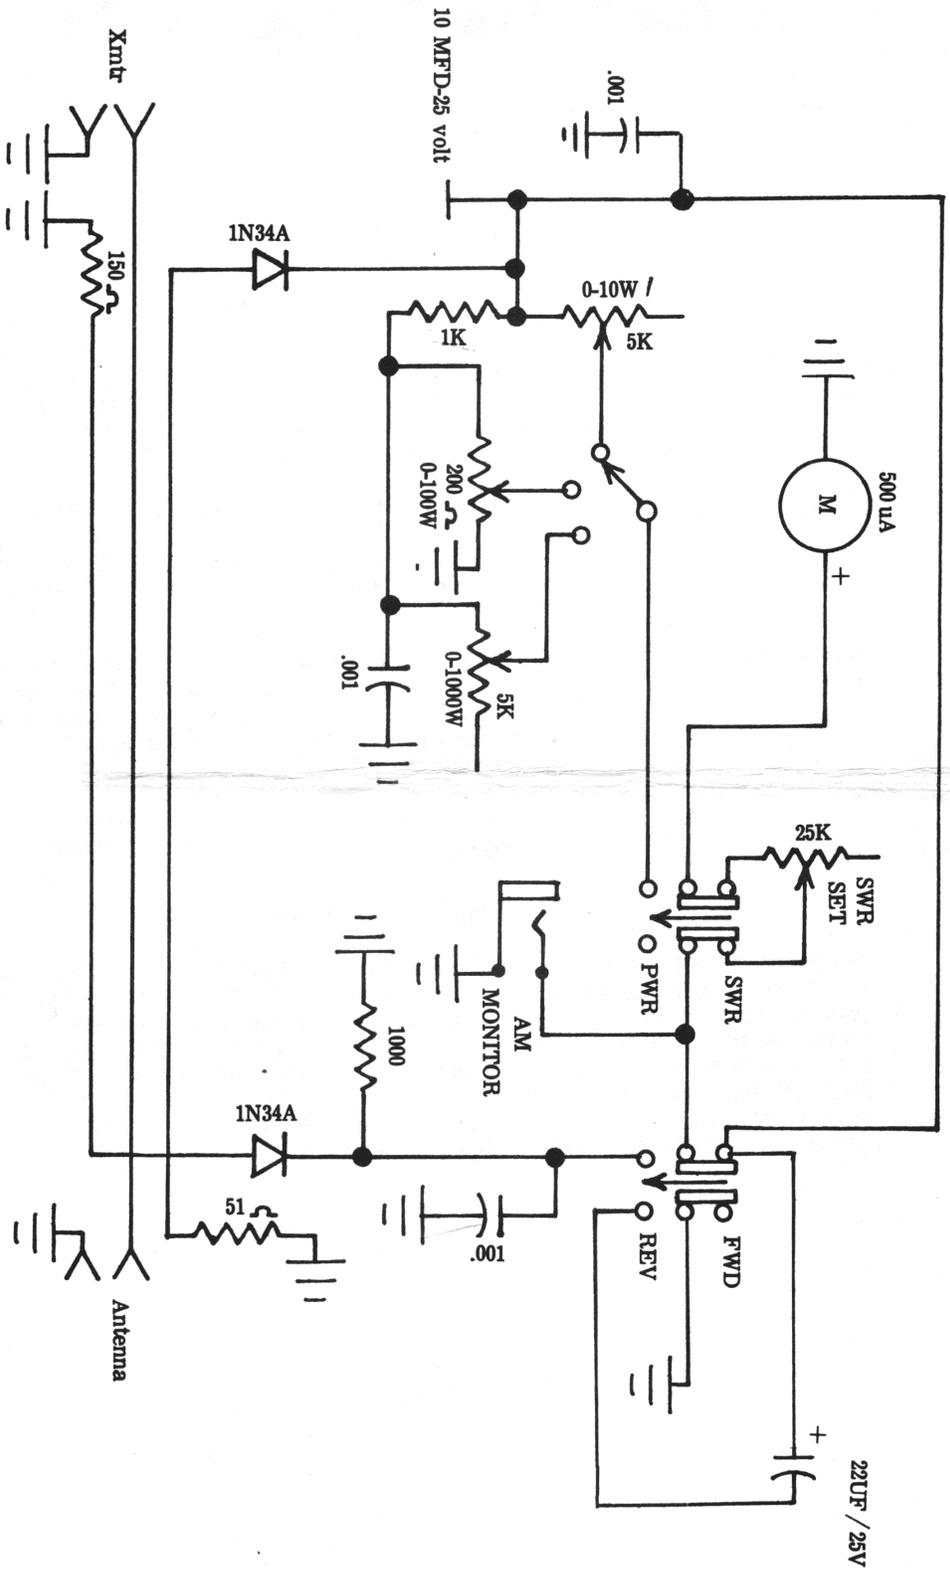

SCHMATIC DIAGRAM - PALOMAR MODEL 500 INLINE WATTMETER
 PALOMAR ELECTRONICS CORP. - ESCONDIDO, CA