## This Manual is provided by



# Someone who wanted to help you repair your equipment scanned this manual.

If you would like to help us put more manuals online support us.

Supporters of CBTricks.com paid for the hosting so you would have this file.

CBTricks.com is a non-commercial personal website was created to help promote the exchange of service, modification, technically oriented information, and historical information aimed at the Citizens Band, GMRS (CB "A" Band), MURS, Amateur Radios and RF Amps.

CBTricks.com is not sponsored by or connected to any Retailer, Radio, Antenna Manufacturer or Amp Manufacturer, or affiliated with any site links shown in the links database. The use of product or company names on my web site is not endorsement of that product or company.


If your company would like to provide technical information to be featured on this site I will put up on the site as long as I can do it in a non-commercial way.

The site is supported with donation from users, friends and selling of the Galaxy Service Manual CD to cover some of the costs of having this website on the Internet instead of relying on banner ads, pop-up ads, commercial links, etc. to pay my costs. Thus I do not accept advertising banners or pop-up/pop-under advertising or other marketing/sales links or gimmicks on my website.

ALL the money from donations is used for CBTricks.com I didn't do all the work to make money (I have a day job). This work was not done for someone else to make money also, for example the ebay CD sellers.

All Trademarks, Logos, and Brand Names are the property of their respective owners. This information is not provided by, or affiliated in any way with any radio or antenna Manufacturers.

Thank you for any support you can give.

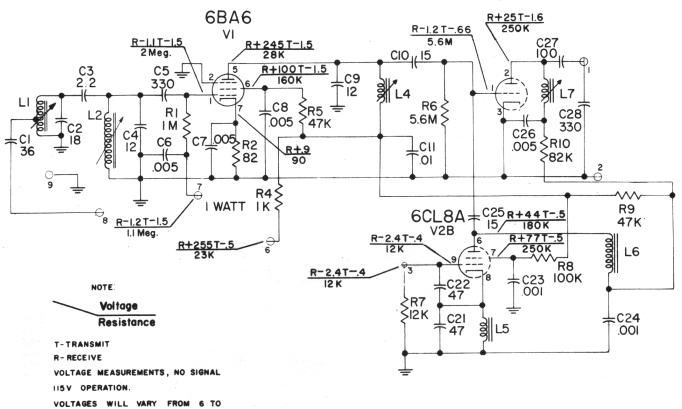

6CL8 6BA6

6CL8 L2

L4

L5

6 7 8 9

12 TO 115 VOLT OPERATION.


VOLTAGE MEASUREMENTS MADE

ALL READINGS ± 10 %

WITH VTVM.


#### POWER PIN CONNECTIONS


I IO MC OUT 6 B+
2 GND 7 AVC
3 XTAL SW. 8 ANT.
4 I2V FIL 9 NOT USED
5 6V FIL

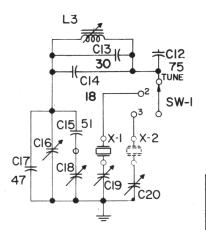


CONVERTER UNIT			
DRAWN BY- 43 II	CHECKED BY- WAR APPROVED BY		
DATE - 9-14-61	DATE - 11-28-61 - PP		
INTERNATIONAL CRYSTAL MFG. CO., INC.			
IS N. LEE , OKLAHOMA CITY, OKLAHOMA			

I.F. UNIT

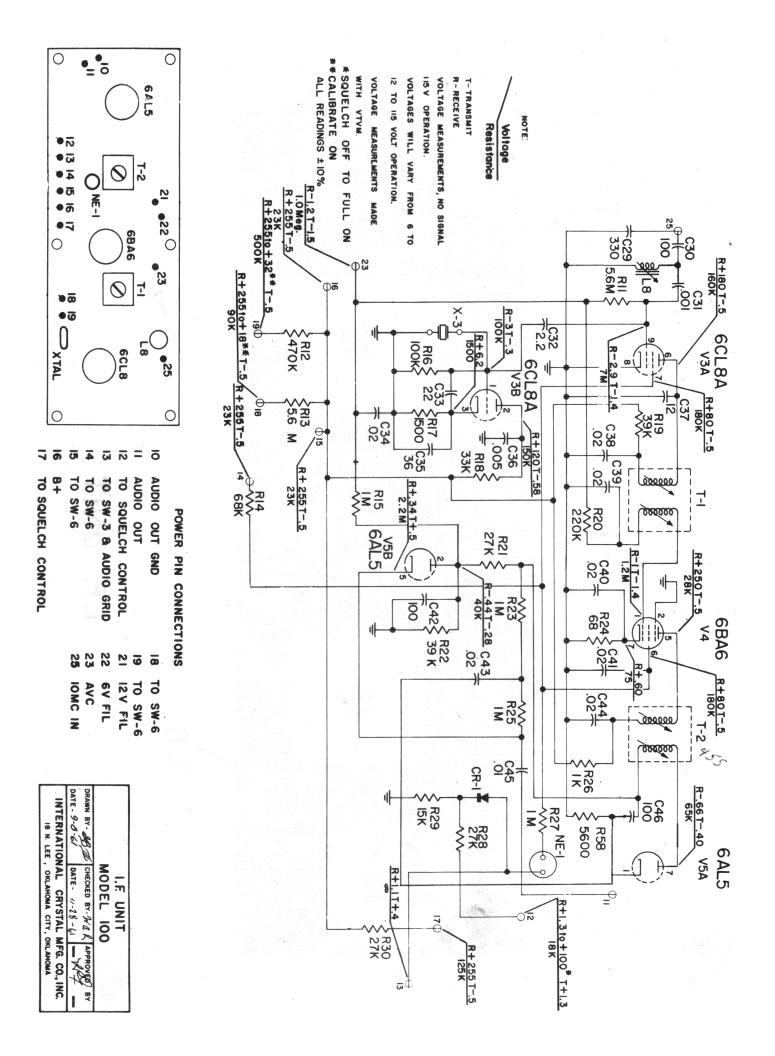


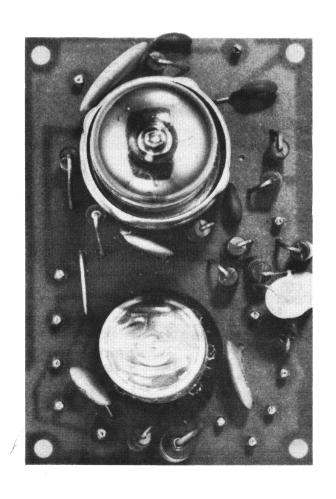



#### 12AX7

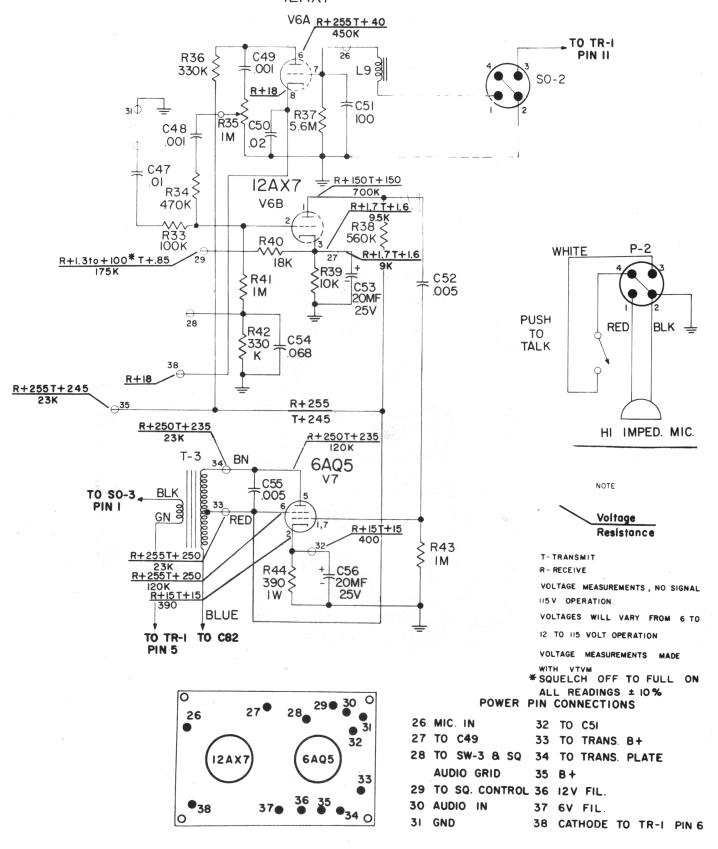



AUDIO UNIT MODEL 100					
	CHECKED BY-WAR				
DATE - 9-11-61	DATE - 11-28-61	- 709 -			
INTERNATIONAL CRYSTAL MFG. CO., INC. IB N. LEE , OKLAHOMA CITY, OKLAHOMA					

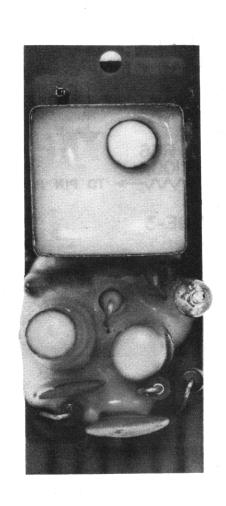

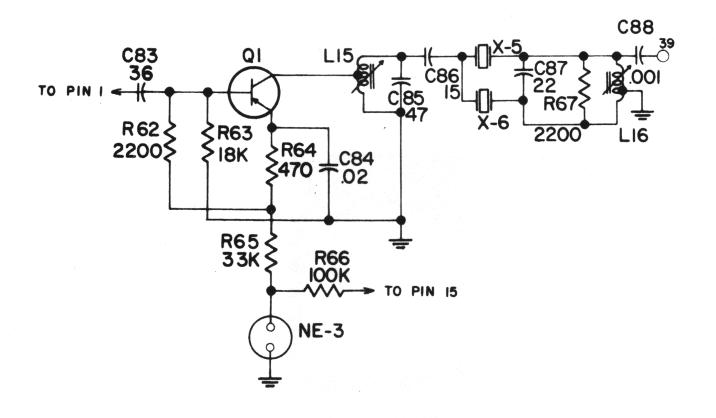

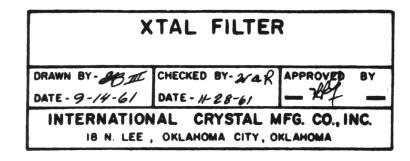

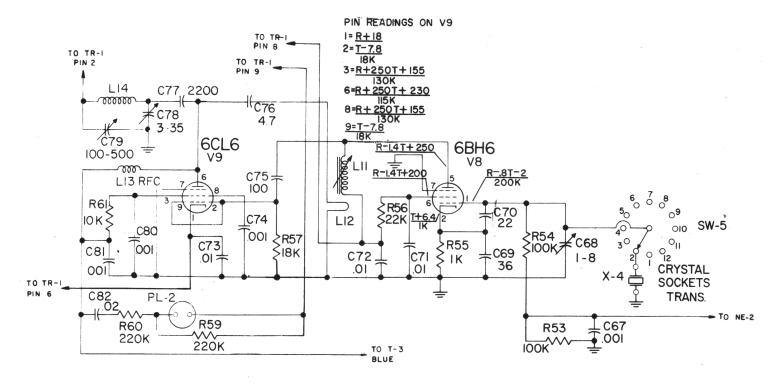


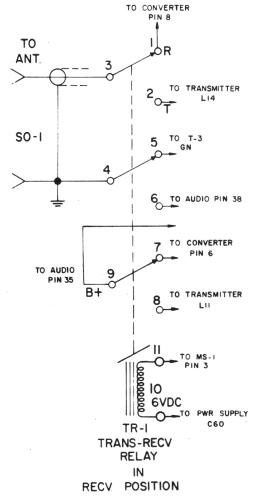


### Voltage Resistance

T-TRANSMIT
R-RECEIVE
VOLTAGE MEASUREMENTS, NO SIGNAL
HIS V OPERATION.
VOLTAGES WILL VARY FROM 6 TO
HIS TO HIS VOLT OPERATION.
VOLTAGE MEASUREMENTS MADE
WITH VTVM.
ALL READINGS ± 10%



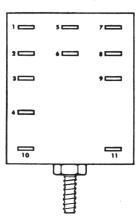

TRANSMITTER MODEL 100				
DATE - 9-/2-6/	DATE - # 28-61 - 10 -			
INTERNATIONAL CRYSTAL MFG. CO., INC. 18 N. LEE , OKLAHOMA CITY, OKLAHOMA				

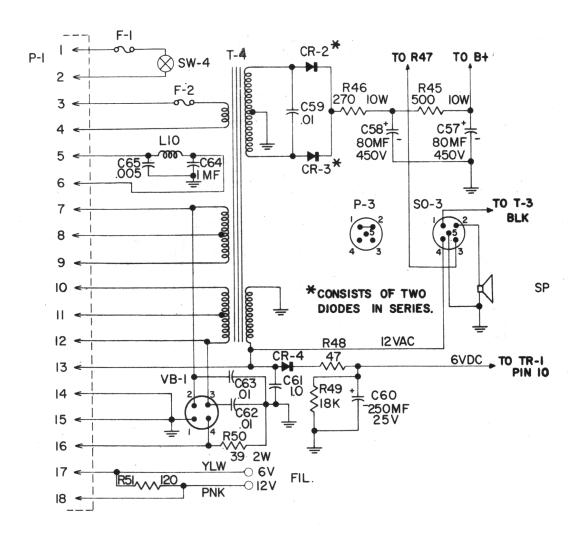

#### POWER SUPPLY CONNECTIONS

II5VAC TO PINS I & 4 JUMPER PINS 2-3, I3-I8

CVDC HOT TO DIN I

6VDC 6VDC HOT TO PIN I 6VDC GND TO PIN I4

> JUMPER PINS 2-5,6-8,8-11,7-10 9-12,17-5,15-18,15-16

I2VDC HOT TO PIN I I2VDC GND TO PIN I4

JUMPER PINS 2-5,6-9,9-10,5-18



T-TRANSMIT

VOLTAGE MEASUREMENTS, NO SIGNAL 115 V OPERATION.

VOLTAGES WILL VARY FROM 6 TO


12 TO H5 VOLT OPERATION.

VOLTAGE MEASUREMENTS MADE

WITH VTVM.


ALL READINGS ± 10%

POWER SUPPLY MODEL 100				
	DATE - /1-28-6/			
INTERNATION	NAL CRYSTAL OKLAHOMA CITY.	MFG. CO., INC.		

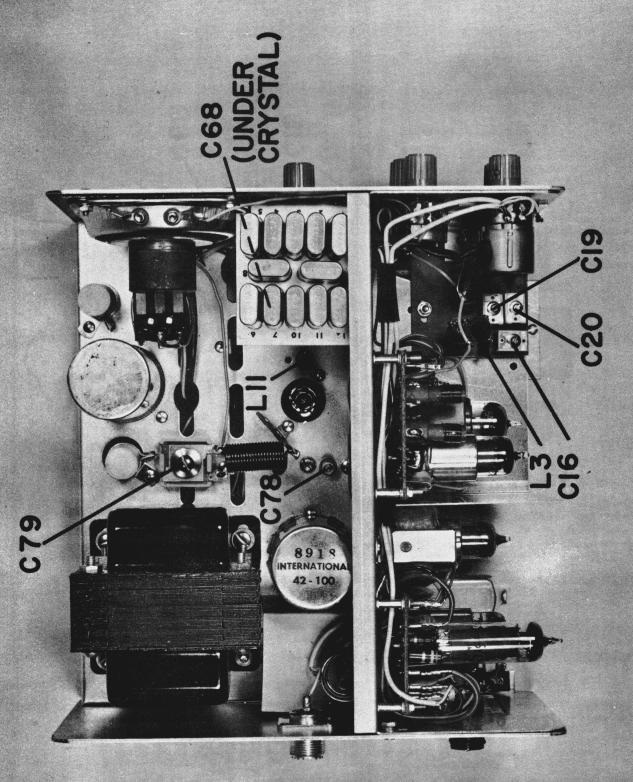

TOP VIEW

POWER SUPPLY & TRANSMITTER

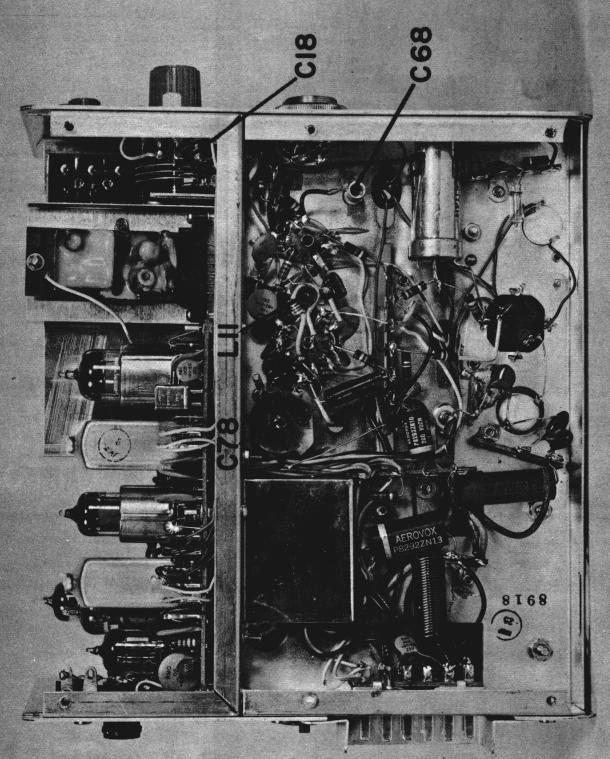

BOTTOM VIEW

POWER SUPPLY & TRANSMITTER