


**Modification in wire connection when using
PCBA-0335R6 to replace PCBA-0335R3**

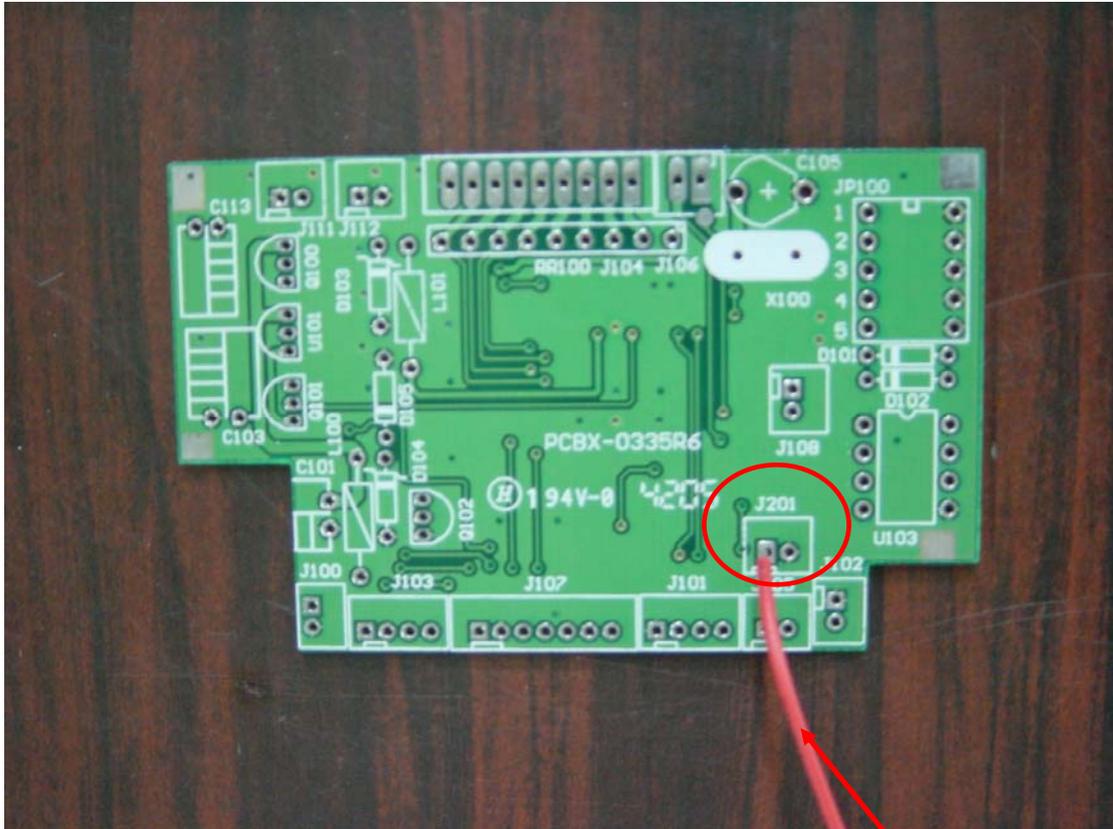

The red wire (which is originally connected to first lead of IC-358 of the module board mounted on PCBX-0335R3) is to be connected to the left hole of J-201 on the PCBX-0335R6.